




O6E 9-Pin Terminal Plate Wiring Diagram (300 series compressors)

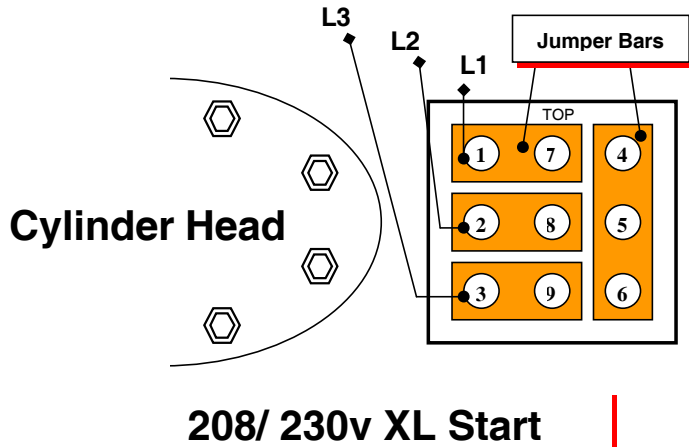

MODEL	RLA
O6E 150	72
O6E 250	87
O6E 265	112
O6E 175	112
O6E 275	135
O6E 199	155
O6E 299	189

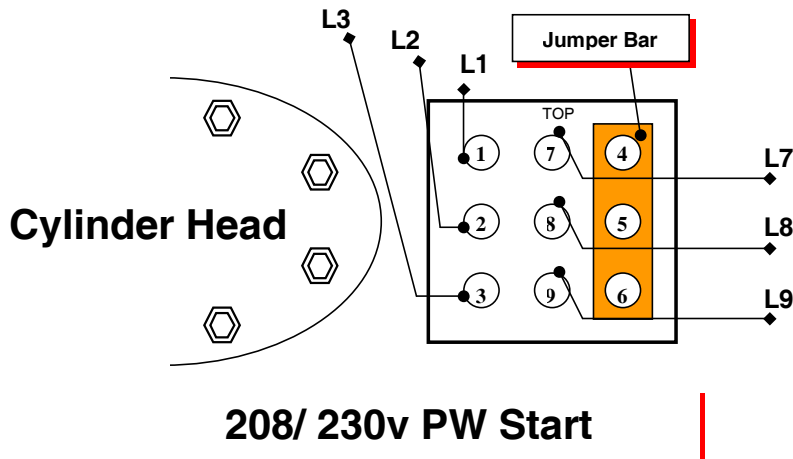

MODEL	RLA
O6E 150	72
O6E 250	87
O6E 265	112
O6E 175	112
O6E 275	135
O6E 199	155
O6E 299	189


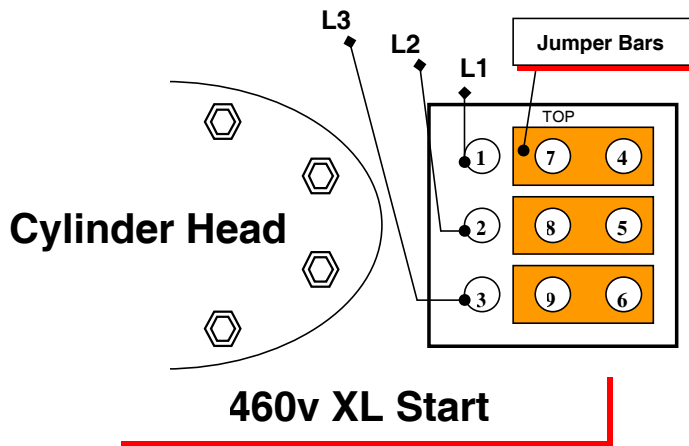


MODEL	RLA
O6E 150	36
O6E 250	44
O6E 265	57
O6E 175	57
O6E 275	65
O6E 199	82
O6E 299	97

WARNING

With 208/ 230/ 460v (300 series compressors), the 460v cannot be wired for PW start.
Use distinct 460v (600 series compressors) for any 460v PW application.

O6E 6-Pin Terminal Plate Wiring Diagram

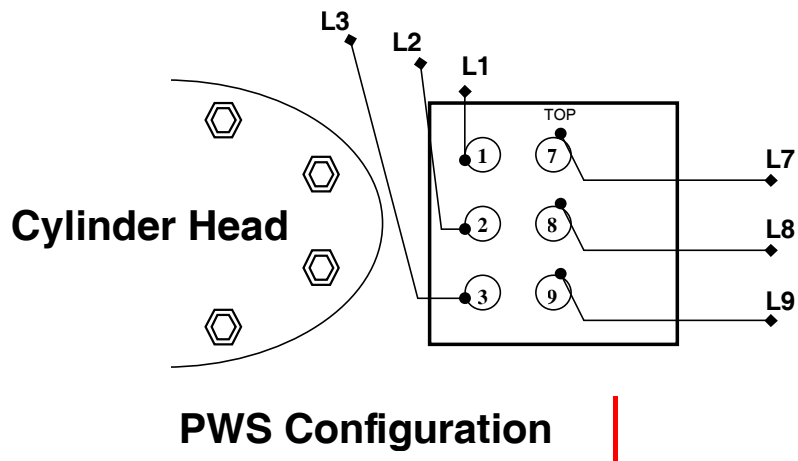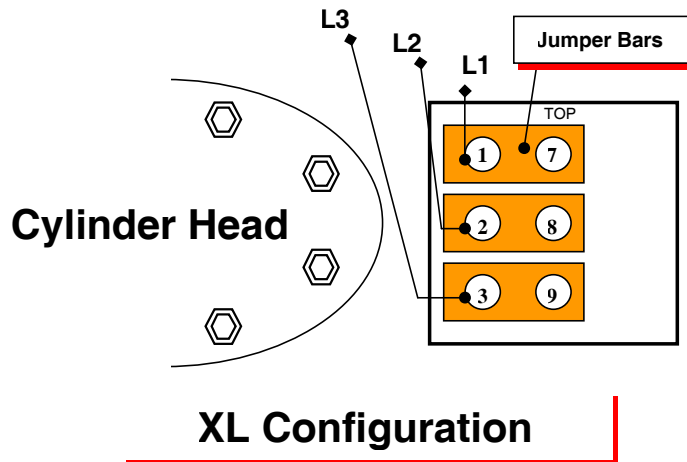

208/ 230v

MODEL	RLA
O6E 150	72
O6E 250	87
O6E 265	112
O6E 175	112
O6E 275	135
O6E 199	155
O6E 299	189

460v

MODEL	RLA
O6E 150	36
O6E 250	44
O6E 265	57
O6E 175	57
O6E 275	65
O6E 199	82
O6E 299	97